STYLE. INNOVATION. YOU.

INTERNET TABLET
& HD VIDEO PLAYER

WITH 7” TOUCH SCREEN & ANDROID™

CAPACITIVE TOUCH SCREEN

eBOOK

Wi-Fi READY

FLASH MEMORY

VOICE RECORDER

EXPANDABLE

INTERNET BROWSER

SOCIAL NETWORKING

User Manual

eGlide Pro III

Table of Contents

Notes, Cautions, and Warnings 3

Company Statement..... 3

Important Safety Precautions..... 4

Cleaning Your Device 4

Package Contents 5

eGlide Pro III Player Functions..... 6

Understanding Your eGlide Pro III Player..... 8

Touch Screen.....8
Screen Orientation 8

Setting Up Your eGlide Pro III Player..... 9

Charge the device:.....9
Battery Management.....9
Turn the device ON/OFF:.....9
Setup the Wi-Fi Network: 10
Connecting to a USB Device.....10
MicroSD Card 10
HOME Screen.....11

All Applications 12

Music 12
Camera.....13
Video.....13
Photos.....14
Transferring media between a computer and the device: 15
Web Browser (requires Wireless Internet).....16
Email (requires Wireless Internet) 18
Reading eBooks.....20
Calendar 20
Calculator.....21
Clock.....21
Settings.....23
Troubleshooting 25
Specifications.....26

Limitations of Liability Statement 27

Thank you for purchasing the eGlide Pro III Player. The operational guidelines in this User Manual will ensure a quick and convenient guide to its main functions and provide the user with trouble-free use for business and pleasure. Please read the instructions carefully before use.

Notes, Cautions, and Warnings

Note: A NOTE indicates important information that helps you make better use of your device.

CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.
© 2011 Ematic Inc. All rights reserved.

Windows is a registered trademark of Microsoft.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products.

Company Statement

- Specifications are subject to change without notice.
- Always backup your important data. Ematic assumes no responsibility for any loss of data / music / video/ other files if the product is used in a careless manner. Please follow the user manual for standard operation, and make timely backups.
- This manual has been carefully checked, however, we assume no responsibility for any errors.
- If there are any discrepancies between the pictures in this manual and the actual product, the actual product prevails.
- Ematic cannot be held responsible for any downloading of illegal eBooks, music, or videos, or for any content that is illegal.

Important Safety Precautions

Always follow these basic safety precautions when using your device. This reduces the risk of fire, electric shock, and injury.

- Never use the player while driving or when operation any vehicle, as this could cause an accident. Take care when using the player outdoors, especially when crossing the street.
- Do not operate the player in areas where the use of wireless equipment is forbidden or when the usage of the player may cause interference and danger.
- Excess use of headphones at high volume may cause permanent hearing impairment.
- Avoid strong impact or any collision with the product.
- Avoid using this product in the following conditions: high and low temperature, moisture, dust, strong magnetic fields and long-term exposure to sunlight.
- Do not use the player in extremely dry environments as this can lead to static discharge, which can damage the player.
- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and away from heat sources (over 40°C).
- Protect the power cord. Route power cords so they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- This product is a high-precision electronic device. Do not remove the cover or disassemble in any way. There are no user-serviceable parts inside.
- Only use permitted chargers and accessories. Use of any other type of accessories violates the warranty and may be dangerous.
- Disconnect the player from the power source before cleaning.

Cleaning Your Device

- Treat the screen gently. Pressing the buttons or the screen too hard can damage the player.
- To clean fingerprints or dust from the screen, use a soft, non-abrasive cloth such as a camera lens cloth.
- Use a damp cotton cloth to wipe the product shell.
- Do not use any chemical cleaning solutions on the product.

Package Contents

Check the contents of the package to verify it contains the following:

- eGlide Pro III Player
- USB 2.0 Cable
- Wall Charger
- User manual
- eMusic Trial Offer

eGlide Pro III Player Functions

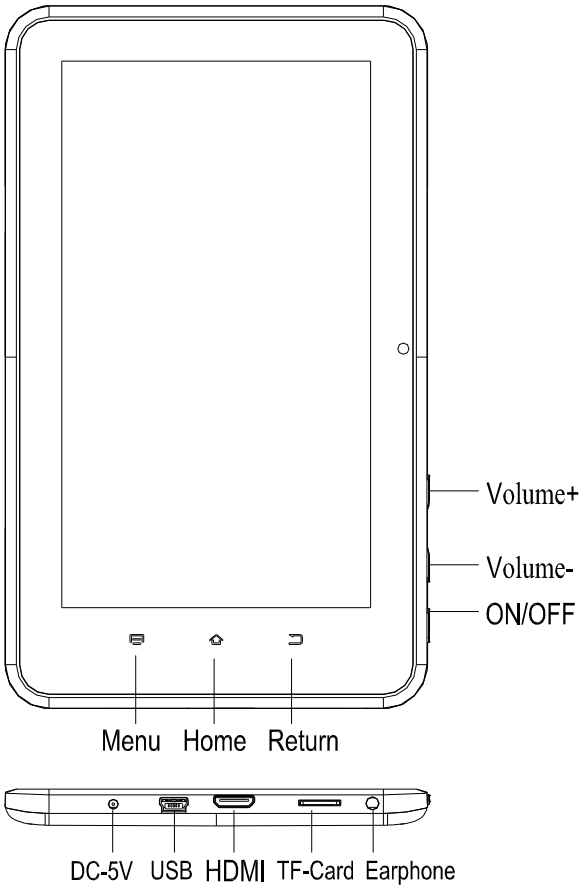

Buttons/Connectors/Parts	Functionality
Power (ON/OFF)	• If the device is OFF, press and hold the power button for 3 seconds to power ON the device. • If the device is ON, press and hold the power button for 3 seconds. Press POWER OFF and then tap OK on the screen to power OFF the device. • If the device is in SLEEP MODE, press and release the power button quickly to turn sleep mode ON and OFF.
Volume	• While playing media: - Press and release to increase (+) or decrease (-) the volume one level at a time. - Press and hold to increase (+) or decrease (-) the volume by larger incremental levels.

Buttons/Connectors/Parts	Functionality
Menu	• Press to display available options.
Home	• Press to return to the HOME page/screen.
Return	• Press to return to the previous screen, to close a dialog box, a menu, or a message.
DC-5V Power Interface	• Connect the power adapter to an electrical outlet and then connect to the device to charge the battery.
USB Slot	• Connect to a computer through the USB cable.
HDMI Interface	• Connect to a TV to view video
TF Card Slot	• Insert a microSD card into the TF Card Slot. NOTE: The device supports a maximum 32GB microSD card.
Earphone	• Connects to headphones and automatically switches audio output from the audio speakers to the headset.
Manual Shutdown	• If the device freezes or has no response, press and hold the power button for 6 seconds to shutdown the player. **NOTE:** Performing a manual shutdown does not restart the player. Press the power button to reboot and to power ON the player.

Understanding Your eGlide Pro III Player

Touch Screen

Your device has a multi-touch sensitive screen that allows quick, easy and convenient navigation for all applications.

Throughout this User Manual, you are instructed to use the following navigation methods:

Action	Response
Tap	
Quickly tap and release one time on the screen.	Selects the items on the screen including options, entries, images, and icons. Starts applications. Presses the buttons on the screen. Inputs text using the on-screen keyboard or number keypad.
Finger Slide	
Touch and slide your finger across the screen and then release.	Moves items such as images and icons on the screen. Moves the adjustment icon along a track to change a setting (i.e., volume, brightness, screen unlock, etc.) Moves the desktop screen horizontally to expose additional display space.
Touch and Hold	
Touch and hold in place approximately 2 seconds and then release.	Displays an options window. Moves applications from the **All Application** screen to the desktop or a folder. Downloads Android applications direct from a website. Deletes email accounts and contacts.

Screen Orientation

With the built-in G sensor, the orientation of the screen automatically changes between Portrait and Landscape when the device is rotated.

Setting Up Your eGlide Pro III Player

Charge the device:

1 Plug the power adapter into an electrical wall outlet.

2 Connect the power adapter to the device's power interface port to fully charge the battery before use (approximately 4 hours).

- Alternative method: Connect the player to a computer via the USB cable to charge the battery.

a While charging, the battery charge indicator will show: .

b When fully charged, the battery FULL indicator will show: .

NOTE: When the battery is out of power, wait at least 1 second before turning the device ON again.

NOTE: The device can be used while the battery is charging, although the charging time is longer when operating and charging at the same time.

Battery Management

The battery is not fully charged out of the box, so it is recommended you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- The lithium-ion battery has no need to completely discharge. It can be charged when the player still has some power.
- When the player is not in use, recharge the device every two weeks to maintain maximum performance of the lithium ion battery.
- Never leave the battery fully discharged for a long period of time.
- Do not charge the Pro III under a high temperature environment (e.g. in sunlight).

Turn the device ON/OFF:

To turn the device ON:

1 Press and hold the POWER button for 3 seconds to power ON the device.

2 Release the POWER button.

NOTE: It may take a few minutes for the system to start-up. Wait before proceeding.

To turn the device OFF:

1 Press and hold the POWER button until the option to "Power OFF" is displayed.

2 Tap "Power OFF".

3 Tap "OK".

Setup the Wi-Fi Network:

NOTE: Since many features require a Wi-Fi connection, it is recommended that the Wi-Fi network be set up with the first use.

1 From the HOME screen, tap the *Wireless & Network Settings* icon .

2 From the INTERNET SETTING menu, tap "**Wi-Fi"** to enable a Wi-Fi connection.

NOTE: indicates Wi-Fi is enabled.

3 Tap "Add Wi-Fi network" to allow the device to automatically scan and to list all the local Wi-Fi Networks found in range of the device.

NOTE: indicates secure networks that require a login name/password to connect.

4 Tap the desired network to which you want to connect.

5 Enter the **Network Information** (password), if applicable.

6 Tap **Connect** to allow the device to attempt to establish a connection to the selected Wireless Internet port.

7 If the connection is successful, the message "Connected to (your network name)" will appear under the Internet Settings.

Connecting to a USB Device

1 Insert a USB device (U-disk, for example) into the USB interface on the device.

CAUTION: Do not insert and remove the USB device repeatedly in a short time, as this may cause damage to the device.

MicroSD Card

NOTE: The device supports a maximum 32GB microSD card.

To insert a microSD card:

Insert a card into the microSD slot until it clicks into place.

To remove a microSD card:

CAUTION: Don't insert and remove the microSD card repeatedly in a short time, as this may cause damage to the card.

1 Close all applications and documents which have been opened from the card.

2 Tap the INDEX icon .

3 Select **Settings**.

4 Select **SD card & device storage**.

5 Select **Unmount SD card**.

6 Press the card lightly to partially eject it.

7 Remove the microSD card from the slot completely.

HOME Screen

The HOME screen displays widgets, folders, and shortcuts that provide easy access to your favorite or frequently-used applications.

NOTE: Touch the HOME button to return to the HOME screen at any time.

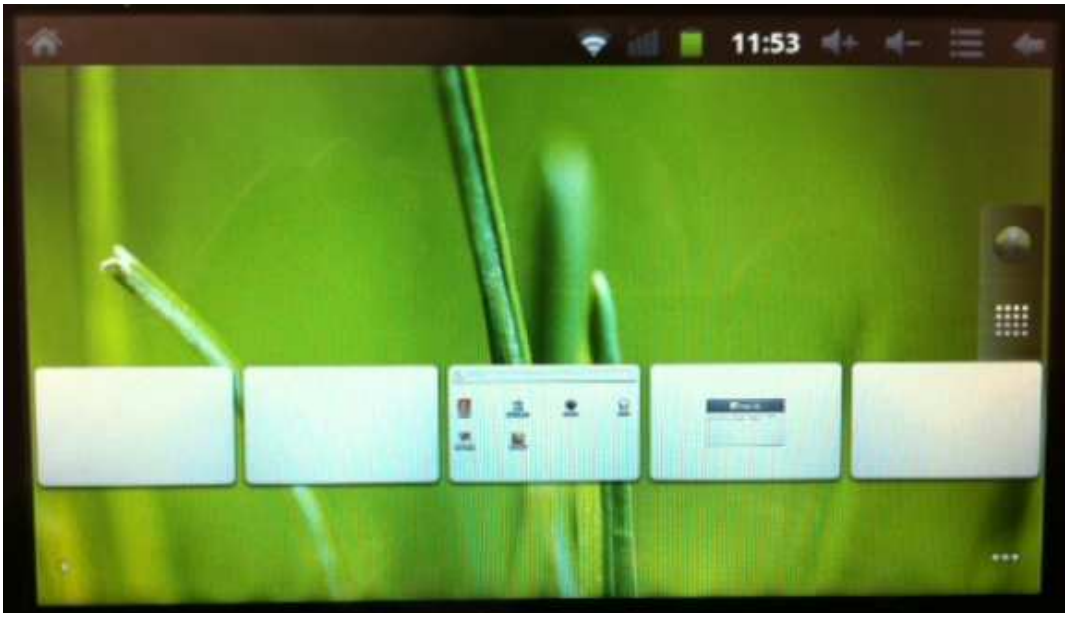

Icon	Description
	Return to HOME from other apps
	Wi-Fi enabled indicator**
	Battery charge status
	Current Time
	Volume increase icon
	Volume reduction icon
	Tap to view the **All Applications** screen
	Back icon

** Requires connection to Wi-Fi network.

- Tap on any application icon to launch it.
- Finger slide histories and libraries to scroll left/right and up/down.
- Touch and hold icons to drag and rearrange, change settings, or remove from the desktop.

All Applications

Music

- From the *HOME Screen or from the All Applications* menu, tap the Music icon to play music and audio files.

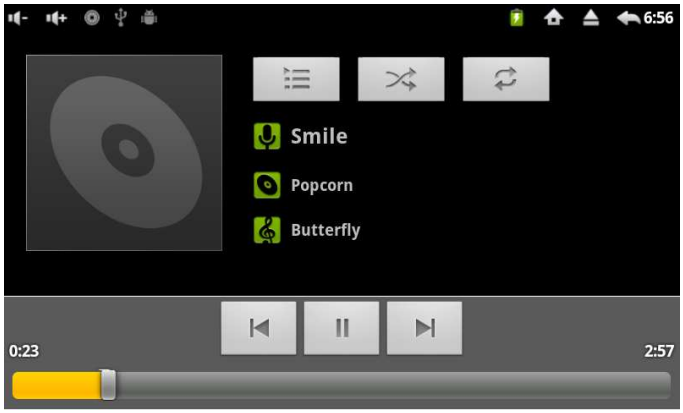

Function	Description
	Drag progression marker to scroll the audio progress
	Tap to decrease volume
	Tap to play the previous song
	Tap to play/pause music
	Tap to play the next song
	Tap to increase volume
	Tap for A-B repeat
	Tap to shuffle songs in the playlist
	Tap to add a song to the playlist
	Tap to view playlist
	Tap to exit the audio player.

Camera

NOTE: To save pictures to the device, insert a MicroSD card before using the camera.

To take a picture:

1. Tap the **Camera** icon .
2. Aim the camera lens at your intended subject.
3. Tap the actuator icon to take the picture.
4. Tap the HOME icon to return to the *HOME* screen.

Press the MENU button to display the **Function Menu**.

Function	Description
Switch to Video	Switches to video mode, allowing you to immediately take a video rather than a picture.

Video

- From the *HOME Screen or from the All Applications* menu, tap the *Photos* icon to view the video/photo gallery.

To view a video:

1. Tap a video group to browse for the desired video.
2. Tap the desired vieo to open it for viewing.
3. Press the return icon to go back to the group interface.

To delete a video:

1. From the photo gallery interface, tap to select a video group.
2. Press the MENU button.
3. Tap to select the video to be deleted.

4. Tap the “Delete” option from the menu to confirm deletion from the gallery.
5. Press the HOME button to return to the photo gallery interface.

Photos

From the *HOME Screen or from the All Applications* menu, tap the *Photos* icon to view the photo gallery.

To view a photo:

1. Tap a photo group to browse for the desired photo.
2. Tap the desired photo to open it for viewing.

To view a photo in any photo group:

1. Tap

.
2. Press the return icon to go back to the photo gallery interface.

To delete a photo:

1. From the photo gallery interface, tap to select a photo group.
2. Press the MENU button.
3. Tap to select the images to be deleted.
4. Tap the “Delete” option from the menu to confirm deletion from the gallery.
5. Press the HOME button to return to the photo gallery interface.

Transferring media between a computer and the device:

Use the *File Explorer* to copy files between an external storage device and the eGlide Pro III.

NOTE: The pre-installed applications and the Android OS occupy a considerable portion of the capacity. It is normal to see a difference between available memory space and total capacity.

1 Connect the device to a computer with the supplied USB cable.

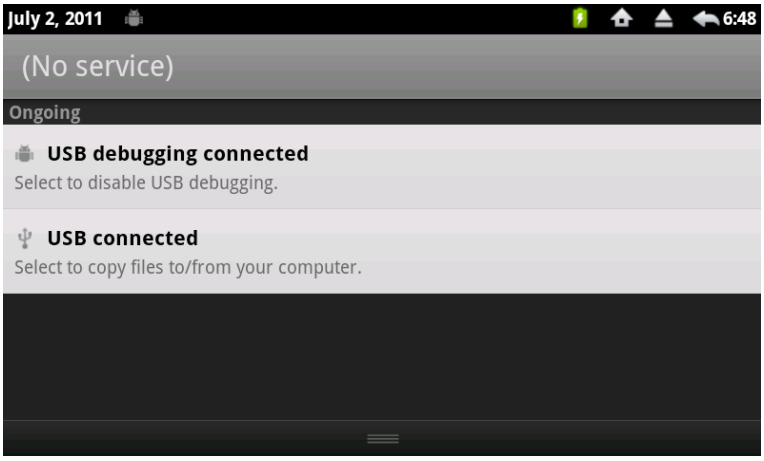

2 Allow the device to turn ON then tap USB CONNECTED to copy files to/from your computer.

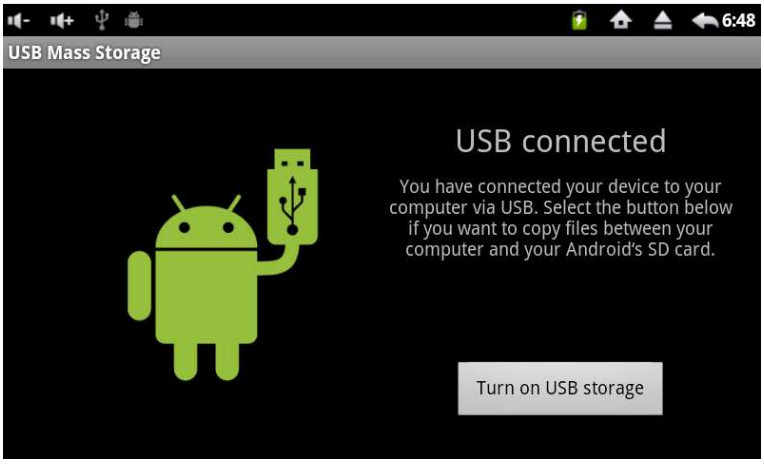
6:48
USB Mass Storage
USB connected
You have connected your device to your computer via USB. Select the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

3 Observe the USB notification message showing a USB connection with your computer and tap “Turn on USB storage”.

4 Observe the two removable disk drivers shown on the computer’s explorer: one is the internal memory of the device and the other is the memory card inserted into the device.

5 Copy files to/from these disk drivers just as you would the hard drive on your computer.

6 Once the data transfer is complete, drag from the top bar downwards to display the USB notification message.

7 Tap “Turn OFF USB Storage”.

8 Tap “Turn OFF” to disconnect the device from the computer.

To safely remove the device from the computer:

1 Left click the icon at the right bottom corner of the computer desktop.

2 Click the pop-up mini window message of “stop the USB Mass Storage Device”.

3 Disconnect the device from the computer.

Web Browser (requires Wireless Internet)

- From the *HOME Screen or from the All Applications* menu, tap the *Browser* icon to access the internet.

Activity/Icon	Description
Drag finger UP/DOWN	Scrolls web page UP/DOWN
Tap link	Opens the link ***NOTE:*** Several web pages can be opened at one time. View them all at once on the screen and then tap one of them to view it in full screen.
	Tap to go back to the previous web page
Menu	Press the menu button to display the available menu items ***NOTE:*** Depending on the web browser, tapping and holding an item may give access to more options.
Go	Use the virtual keyboard to enter the address of a website to visit Tap GO to open the desired website in the current window.

Activity/Icon	Description
Bookmarks	Tap to open the *BOOKMARKS* manager, which consists of three tabs: **Bookmarks:** Shows a list of bookmarks. • Tap a bookmark to open it in the current window. • Use the MENU button to bookmark the last-viewed page. ***NOTE:*** Tapping and holding a bookmark accesses several options (edit, rename, delete, etc.). **Most Visited:** Shows a list of the most visited websites. **History:** Shows a list of recently visited websites. Press the MENU button to clear the *History*.
New Window/Windows	Tap to open new windows or to display all windows currently open.
Refresh/Stop	**Stop** will stop loading a web page, if it is currently opening. **Refresh** will refresh the current web page, if it has stopped loading.
Forward	Tap to go to the next page that has been previously browsed.
More	Tap to access additional options (find on page, select text, page info, downloads, settings, etc.)
	Tap to go directly to the *HOME screen*.

Email (requires Wireless Internet)

- From the *HOME Screen or from the All Applications* menu, tap the *Email* icon to access email.

To utilize the email feature, an active email account must exist where emails can be sent and received. This email address must be setup on the device:

1. Observe the prompt to setup an account when you launch the email application.
2. Tap *NEXT* to start setup.
3. Tap in the input fields to enter the email address and login password using the virtual keyboard.
4. If desired, tap *Send email from this account by default* to make this address the default email account.
5. Tap *NEXT* to continue.
6. Tap in the input field to enter the POP3 and IMAP server information.

NOTE: POP3 and IMAP information can be gotten from the service provider, network administrator, or the Internet.

7. Tap *NEXT* to continue and to allow the device to check the server settings and proceed to the SMTP+ domain name.

NOTE: Multiple email accounts can be setup and stored on the device. However, only one can be the default account. The device will automatically use the default email account when the email application is launched.

Managing email accounts:

To add another account:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. Press the MENU button to display the email sub-menu options.
3. Tap *Accounts* to display a list of current email accounts stored on the device.
4. Press the MENU button to display the accounts sub-menu options.
5. Tap *Add Account*.
6. Follow the steps for setting up an email account to add an account.

To delete an account:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
7. Press the MENU button to display the email sub-menu options.
2. Tap *Accounts* to display a list of current email accounts stored on the device.
3. Touch and HOLD the account to be deleted until a pop-up menu appears.

4. Tap to select *Remove Account* from the pop-up menu.
5. Tap *OK* to confirm the deletion.

To check account settings:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
6. Press the MENU button to display the email sub-menu options.
2. Tap *Accounts* to display a list of current email accounts stored on the device.
3. Touch and HOLD the account to be checked until a pop-up menu appears.
4. Tap *Account Settings* from the pop-up menu to display the setting information for the selected account.
5. Edit the setting information, as desired, for the selected account.

Viewing email messages:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. From the mailbox, slide the list of messages UP/DOWN to scroll through the email list and to locate the desired message.
3. Tap an email message to open it for viewing.
4. Touch and HOLD the message or touch and HOLD the menu button to display the email sub-menu options (reply, forward, or delete).

Viewing the email menu:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. From the mailbox, press the MENU button to display the following email sub-menu options:
    a. Refresh: reloads the list of email messages
    b. Compose: Write a new email message to be sent
    c. Accounts: View a list of email accounts stored on the device
    d. Account Settings: Display and edit account setting information

Reading eBooks

From the home screen, tap an eBook to begin reading.

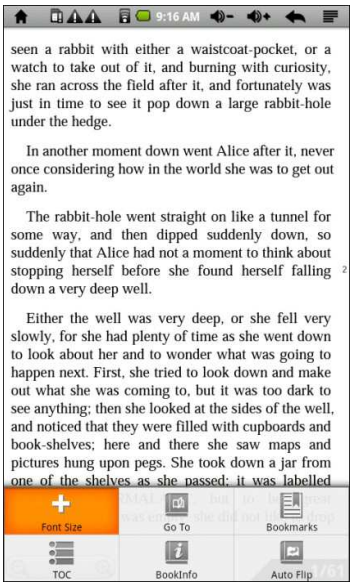
9:16 AM
seen a rabbit with either a waistcoat-pocket, or a watch to take out of it, and burning with curiosity, she ran across the field after it, and fortunately was just in time to see it pop down a large rabbit-hole under the hedge.
In another moment down went Alice after it, never once considering how in the world she was to get out again.
The rabbit-hole went straight on like a tunnel for some way, and then dipped suddenly down, so suddenly that Alice had not a moment to think about stopping herself before she found herself falling down a very deep well.
Either the well was very deep, or she fell very slowly, for she had plenty of time as she went down to look about her and to wonder what was going to happen next. First, she tried to look down and make out what she was coming to, but it was too dark to see anything; then she looked at the sides of the well, and noticed that they were filled with cupboards and book-shelves; here and there she saw maps and pictures hung upon pegs. She took down a jar from one of the shelves as she passed; it was labelled
Font Size
Go To
Bookmarks
TOC
BookInfo
Auto Flip

Paging Up/Down

While reading an eBook do one of the following to move through the eBook:

- Slide the screen to the left or right.
- Tap the left or right side of the screen.
- Tap the *Previous/Next* buttons on the device.

Customizing the Display

While reading an eBook, press the MENU button to access the following display options.

Option	Description
Font Size	Choose between S / M / L / XL / XXL.
Go To	Enter a number to jump to that page.
Bookmarks	Manages Bookmarks (Show / Add / Delete)
TOC	Displays the outline of the eBook, showing the main chapters and topics.
BookInfo	Displays title and author of eBook
Auto Flip	Enter the number of seconds the device will wait before automatically advancing to the next page.

Calendar

The first time using the **Calendar**, you will need to add an Exchange account.

To add an Exchange account:

1 Tap the **Calendar** icon

.

2 Enter an account email address and password.

3 Tap **Next**.

4 Follow the prompts to complete the account configuration.

To add an event:

1 Tap the **Calendar** icon .

2 Tap on the date to which you want to add an event.

3 Tap to enter the desired event information into each entry field.

4 Tap **Finish**.

5 Tap the HOME icon to return to the *HOME* screen.

NOTE: Dates with a colored display indicate scheduled events.

Calculator

- From the *HOME Screen or from the All Applications* menu, tap the **Calculator** icon .
  1. Tap the numbers and sign of operation to perform the desired calculation.
  2. Tap **clear** to clear the result.
  3. Tap the HOME icon to return to the *HOME* screen.

Clock

Tap the **Clock** icon to launch the application to see the time and date and to set the alarm.

NOTE: The alarm clock icon displayed at the top of a screen indicates one or more alarms have been set and are active.

To add an alarm:

1 Tap the **Clock** icon .

2 Press the MENU button.

3 Select **Add alarm**.

4 Set the desired alarm.

NOTE: If you don't select a repeat frequency, the alarm is automatically deleted after it is activated.

5 Tap **Turn alarm ON**.

6 Tap **Done**.

To silence an alarm alert:

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

1 Tap **snooze** to be reminded again in 10 minutes.

2 Tap **dismiss** to cancel the alert.

To activate/deactivate an alarm:

On alarms set to repeat, you may want to temporarily suspend an alarm rather than delete it.

1 Tap the **Clock** icon .

2 In the **Alarm** screen, tap the check icon by the desired alarm(s) to activate the alarm.

3 Tap the check icon to deactivate and suspend an alarm.

4 Tap the HOME icon to return to the *HOME* screen.

To edit an alarm:

1 Tap the **Clock** icon .

2 Tap on the alarm you want to edit.

3 Make the desired changes to the selected alarm.

4 Tap the HOME icon to return to the *HOME* screen.

To delete an alarm:

1 Tap the **Clock** icon .

2 Tap on the alarm you want to delete

3 Press the MENU button.

4 Select **Delete alarm**.

5 Tap the HOME icon to return to the HOME screen.

Settings

- Tap the *Settings* icon to access the settings menu.
- Tap to select the desired setting to be viewed or edited.

Setting	Sub-Menu	Description
Wireless and network	Wi-Fi	Open Wi-Fi
	Wi-Fi settings	Setup and manage wireless access points
	VPN settings	Add VPN
	Mobile networks	
Sound	Silent mode	Except the media and the alarm clock sounds, all are set to mute
	Volume	Adjust media volume, alarm clock volume, and inform the volume. Click and move slider, and then click ok
	Notification ringtone	Select the desired inform rings.
	Audible selection	When selecting screens broadcasting sound
Display	Screen Lock sounds	When locking and unlocking screen to play sounds
	Brightness	Click and move slider to adjust screen brightness, and then click ok
	Automatic rotating screen	When make checked, the screen will be automatically switch between screen and vertical screen according to equipment direction of rotation
	Screen timeout	Adjustment a delayed time for automatically locked screen
	G-sensor calibration	
Location & security	Location and security settings	
Applications	Unknown sources	Allow to install the applications from the non-Android market
	Management application	Manage and delete installation applications
	Running services	Check and control the currently running services.
	Storage use	View the used storage space in application
	development	Setup application development options
Privacy	Recovery factory Settings	Click will remove all the data on device. Click reset device will be reset, or click to cancel and return to a screen **Warning**! The following will delete all the data from equipment: ~ Google account ~ system and the application's data and Settings ~To download applications The following won't because the reset to be delete: ~ the current system software and bind application ~ SD documents, such as music or photos
Storage	Storage	TF card setting

Setting	Sub-Menu	Description
	Internal storage	Check your usable storage space
Language and keyboard	choose Language	According to your location select the corresponding language
	Android Keyboard	Screen keyboard Settings
	User dictionaries	User can add words to user dictionaries
Voice input&output		
Date and time	**set date**	Set date
	Select time zone	Select time zone
	Set time	Set time
	Using 24 hour format	Can choose to use 24 hours format or 12 hour format
	Choose the date format	User can choose the date format
About device		Check status messages, and power usage, legal information, model, Android version, kernel version and the version number

Troubleshooting

Cannot power ON the device

- When the battery is low the device cannot be powered ON. Conect it to a computer via USB or use the wall charger to charge it before powering on the device again.
- Reset the device to see if it can power ON normally.
- Check with the computer to see if connects correctly.

No sound from the earphone

- Check if the volume is set to 0.
- Check if the music or video is damaged. Try to play with other files. If the files are damaged it might cause serious noise or leaps.

Cannot copy files

- Make sure the connection with the computer is correct.
- Check if the memory is FULL.
- Check if the USB cable is broken.

Specifications

LCD Display	Size	7.0” TFT touch panel LCD display Capacitive screen Multi-touch 5-point
	Resolution	800x480 16:9
USB port	USB 2.0 High Speed	
Port	HDMI mini	
CPU	BOXCHIP A10 / CORTEX A8 (1.2GHz)	
Memory	DDR3 512MB	
Built-in Flash	4GB support up to 16GB	
Capacity Expansion	Support SD Card up to 32GB	
Wifi	Support WIFI (Protocol 802.11b/g/n)	
Support	G-SENSOR	
	Support external 3G dongle	
Camera	0.3M front camera	
Power Supply	Built-in 3200mAH Lithium rechargeable battery DC 5V	
Earphone	Jack 3.5mm	
Speaker	Built-in speaker	
Camera	Built-in camera 0.3M	
Audio format	MP3/WMA/OGG/WAV/	
Video format	AVI/WMV/RM/3GP/MKV/MP4/ASF/VOB/MPG/TS/ TP/DVIX/MOV / Support 720P HD-Definition	
Picture format	JPEG /BMP/ GIF/ PNG	
E-book format	EPUB/TXT/RTF/PDF/FB2	
Recording format	WAV	
Game	3D game, Android games applications	
Other features	Support flash 10.3	
Compatibility	Windows or MAC and Linux (with mass storage support)	

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Limitations of Liability Statement

Links to Third Party Sites

The Ematic User Manual may contain links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or claims whatsoever about any other website which you may access through this user manual. When you access a non-Ematic website, even one that may contain an Ematic logo, please understand that is independent from Ematic, and that Ematic may have no control over the content on that website. In addition, a link to a non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or the use, of such website. It is up to you to take precautions to ensure that whatever you select for your use is free of such items as viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result in using the Ematic User Manual.

Limitation of Liability and Indemnity

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to Ematic, the use of The Ematic User Manual or any Ematic product and/or software. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Copyright © 2011 Adobe Systems Incorporated. All rights reserved.

©2010 Kobo Inc. All rights reserved. TM Kobo, the Kobo logo, the Kobo eReader logo and eReading: anytime. anyplace. are trademarks of Kobo Inc., 364 Richmond Street West, Suite 300, Toronto, ON M5V 1X6 Canada. ©-2010 Bluetooth SIG, Inc. All rights reserved. Borders is the registered trade mark of Borders Properties Inc.

Copyright © 2011 Ematic. All Rights Reserved.

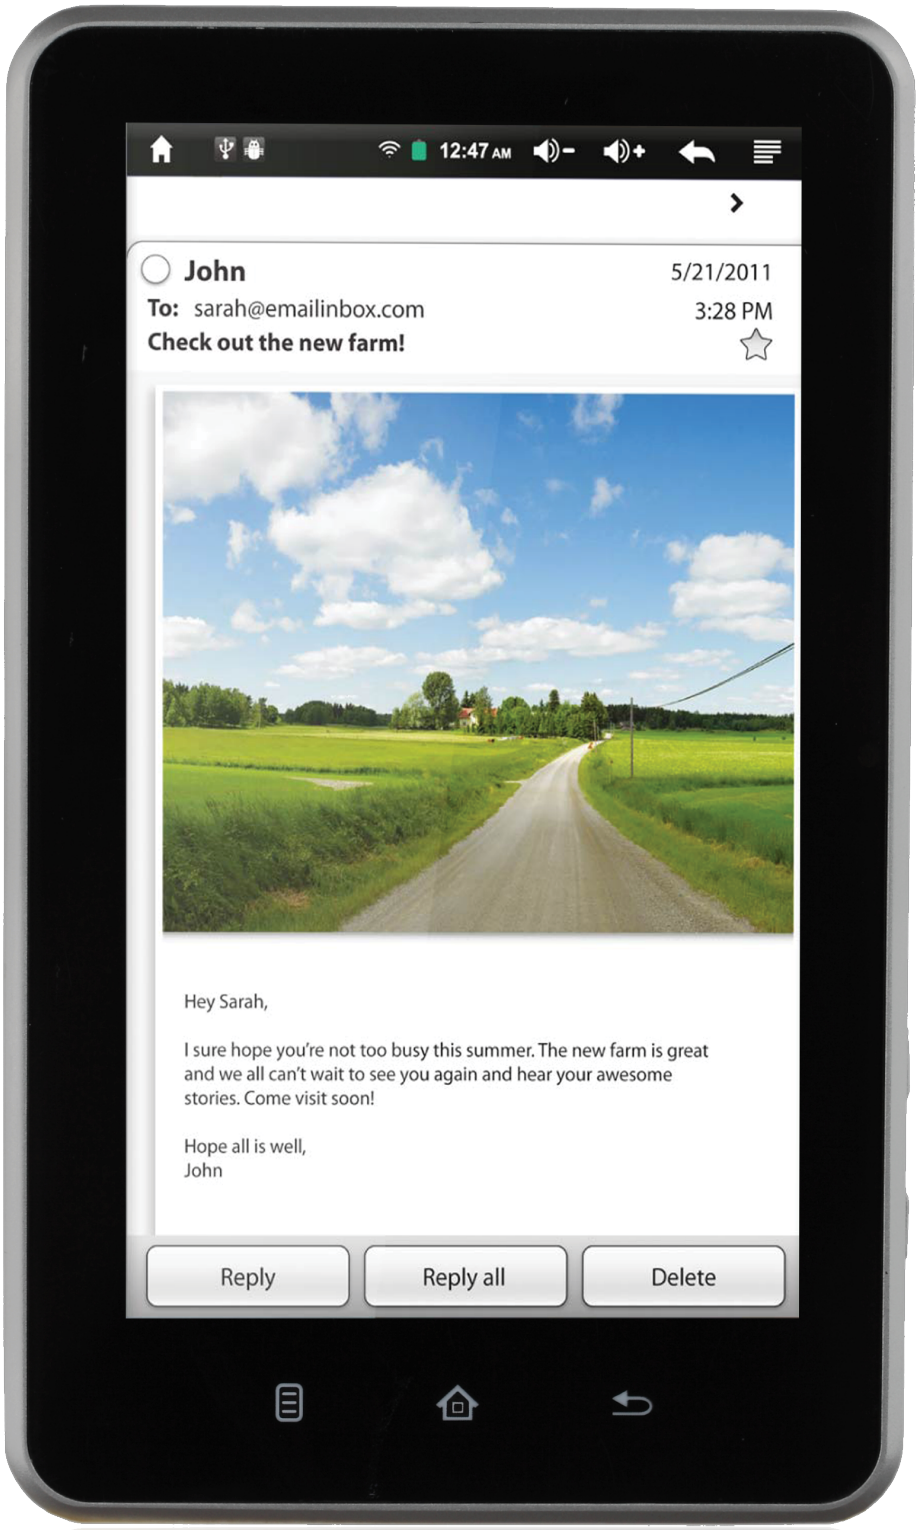
12:47 AM
John
5/21/2011
To: sarah@emailinbox.com
3:28 PM
Check out the new farm!
Hey Sarah,
I sure hope you're not too busy this summer. The new farm is great and we all can't wait to see you again and hear your awesome stories. Come visit soon!
Hope all is well,
John
Reply
Reply all
Delete

©2011 Ematic. All Rights Reserved. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.